

## Knitted Teddy Pattern

### Please use this pattern for all teddies

#### Materials

Washable double knitting wool in four colours  
main colour for head and paws  
trouser colour  
jumper colour  
scarf colour

All knitting yarn **must** meet the BS EN71-3 standard. This is not shown on knitting yarn labels. However, all knitting yarn sold by *Hobbycraft* meets this standard. *Hobbycraft* sell online ([www.hobbycraft.co.uk](http://www.hobbycraft.co.uk)) and have stores across Britain ([www.hobbycraft.co.uk/storefinder](http://www.hobbycraft.co.uk/storefinder))

Please avoid 'tinsel' yarns, those with attached sequins or mohair style yarns with fibres that pull off.

3mm knitting needles (UK size 11)

New polyester filling conforming to BS1425 (for cleanliness) and BS5852 (for flammability). This is also available from *Hobbycraft*.

Wool or embroidery thread

#### Tension

26st and 36 rows to 10cm over stocking stitch on 3mm needles

While the finished size is not important, the stitches should be close together so that when the finished toy is stuffed, the filling does not come out through gaps in the stitches.

#### Instructions

Cast on 10 stitches in main colour. Knit 10 rows  
Change to trouser colour and knit 30 rows

Knit another leg. Then knit across both legs (20sts) and work a further 16 rows.  
Change to jumper colour and knit 24 rows.

Change to main colour and stocking stitch (one row knit and one row purl) for 14 cm (5 1/2 inches).

Change to jumper colour. Continue the remainder of the teddy in reverse order.

Stitch down sides of head.

Make arms: with jumper colour, pick up and knit 8 stitches on each side of the neck join. (16sts). Knit 20 rows, then change to main colour and knit 10 rows for paws.  
Cast off.

Repeat for the other arm.

Scarf: cast on 75sts. Knit 4 rows, cast off loosely.

Weave in all loose ends. Sew up the teddy using an overcast stitch or back stitch, leaving an opening in the crutch for filling. Sew diagonal corners on the head for ears before stuffing with polyester filling. Sew up the opening.

Run a thread through the knitting to make a neck and draw it in, knot the ends and weave in the excess.

Embroider a smiley face using small stitches, (back stitch and stem stitch), and ensure all ends are firmly finished. Remember that the eyes actually come half way down the face!

Tie the scarf around teddy's neck and stitch across the back neck to fix securely. The loose ends of the scarf must not exceed 22cm (8½ inches).

May 2017